
CONNECT
TRANSPORTER

KIT FITTING INSTRUCTIONS

P-BATT-2000-K-N

Battery kit

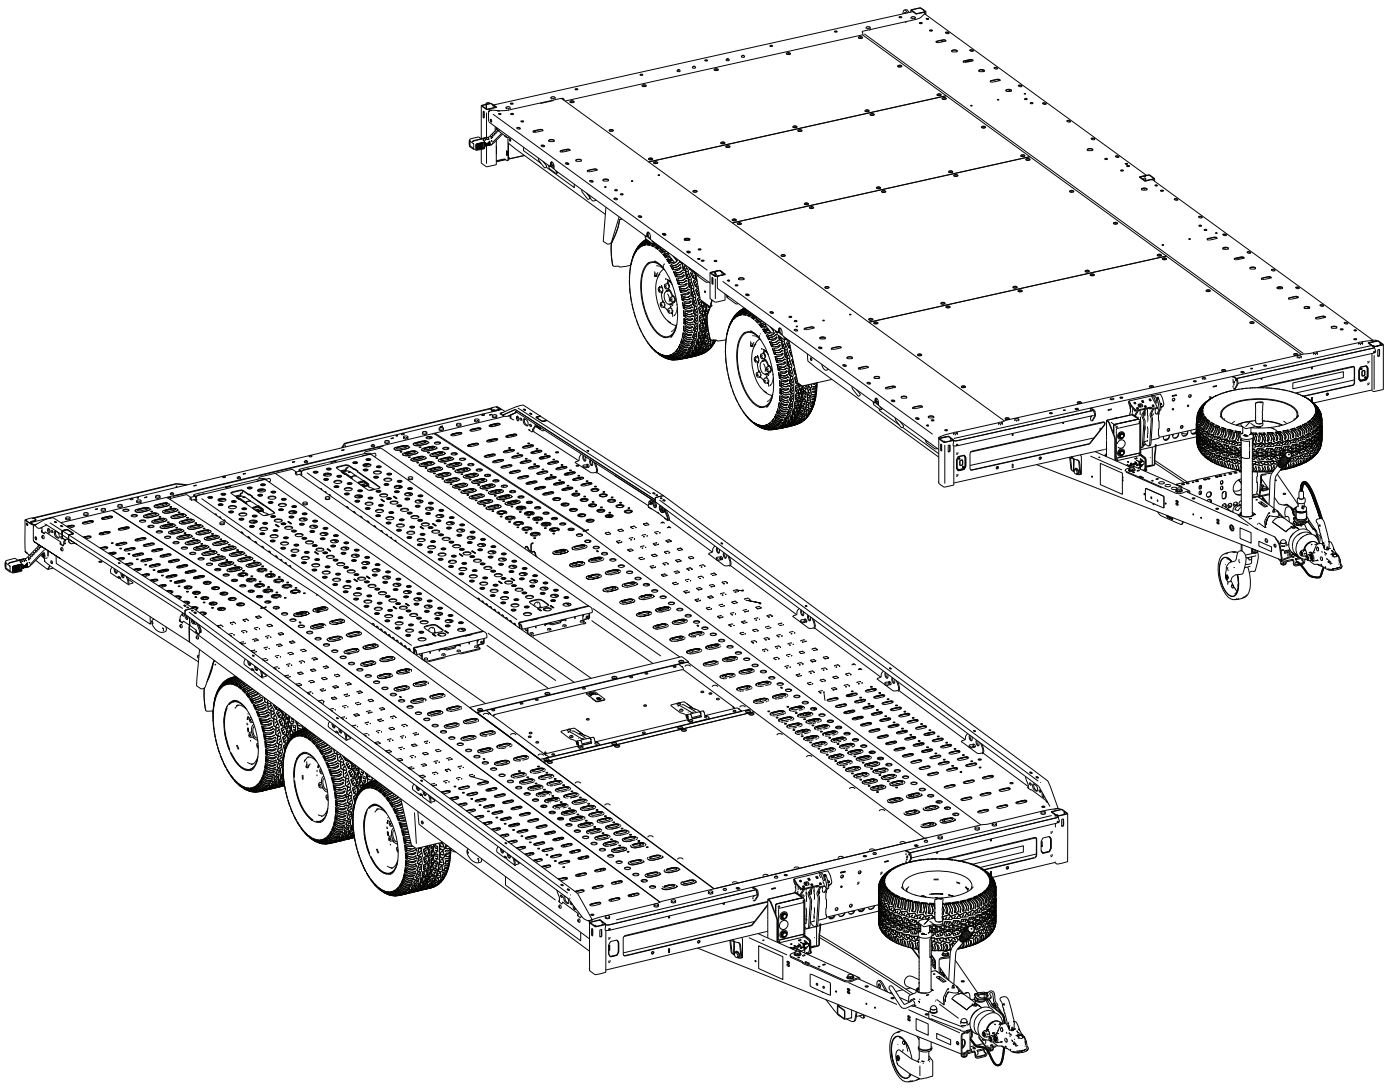

BJT BRIAN JAMES TRAILERS


Edition TTRAN-BATTKIT_2024_Q2_2

PARTS INCLUDED

P-BATT-2000-K-N


P-TT22-8950-A-N

1x

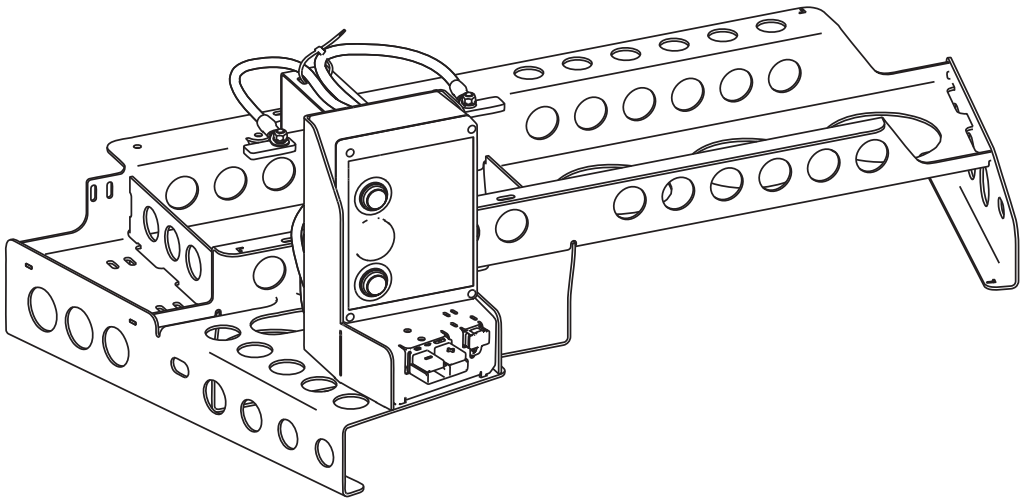

P-WIBA-5410-A-N

1x

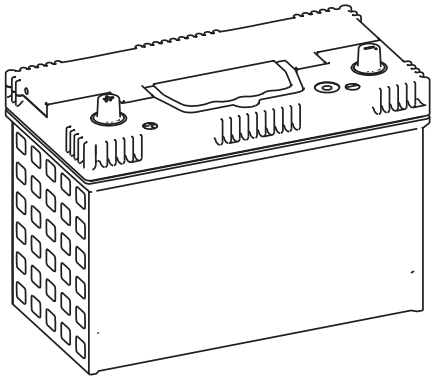


P-FTXK-7010-K-N



1x


P-WIEH-9001-A-N

1x

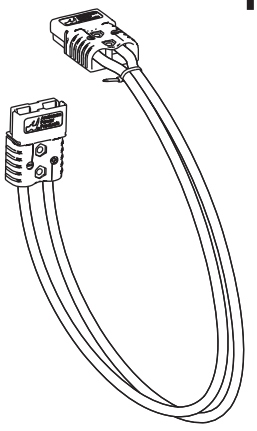


P-ELEC-1225-P-N

1x




P-ELEC-1220-P-N


1x

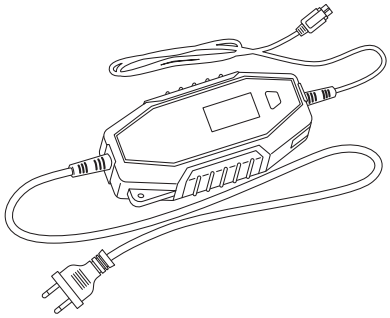


STEP 1

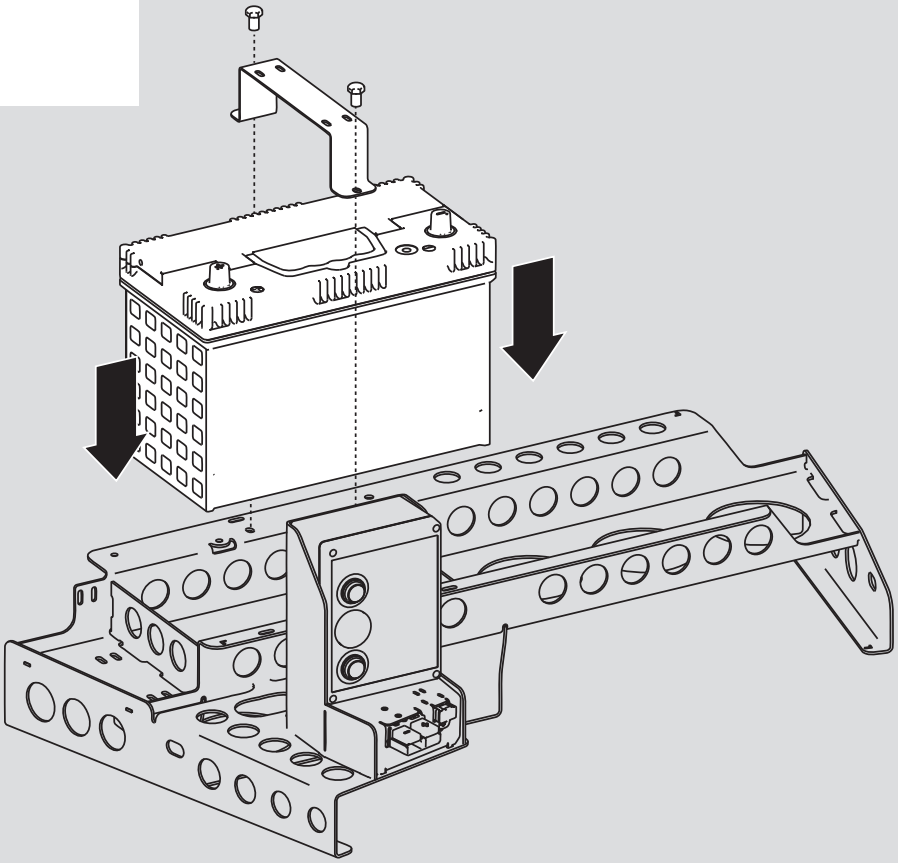


STEP 2

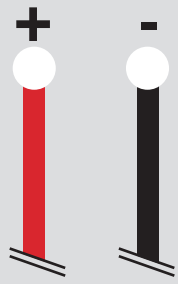


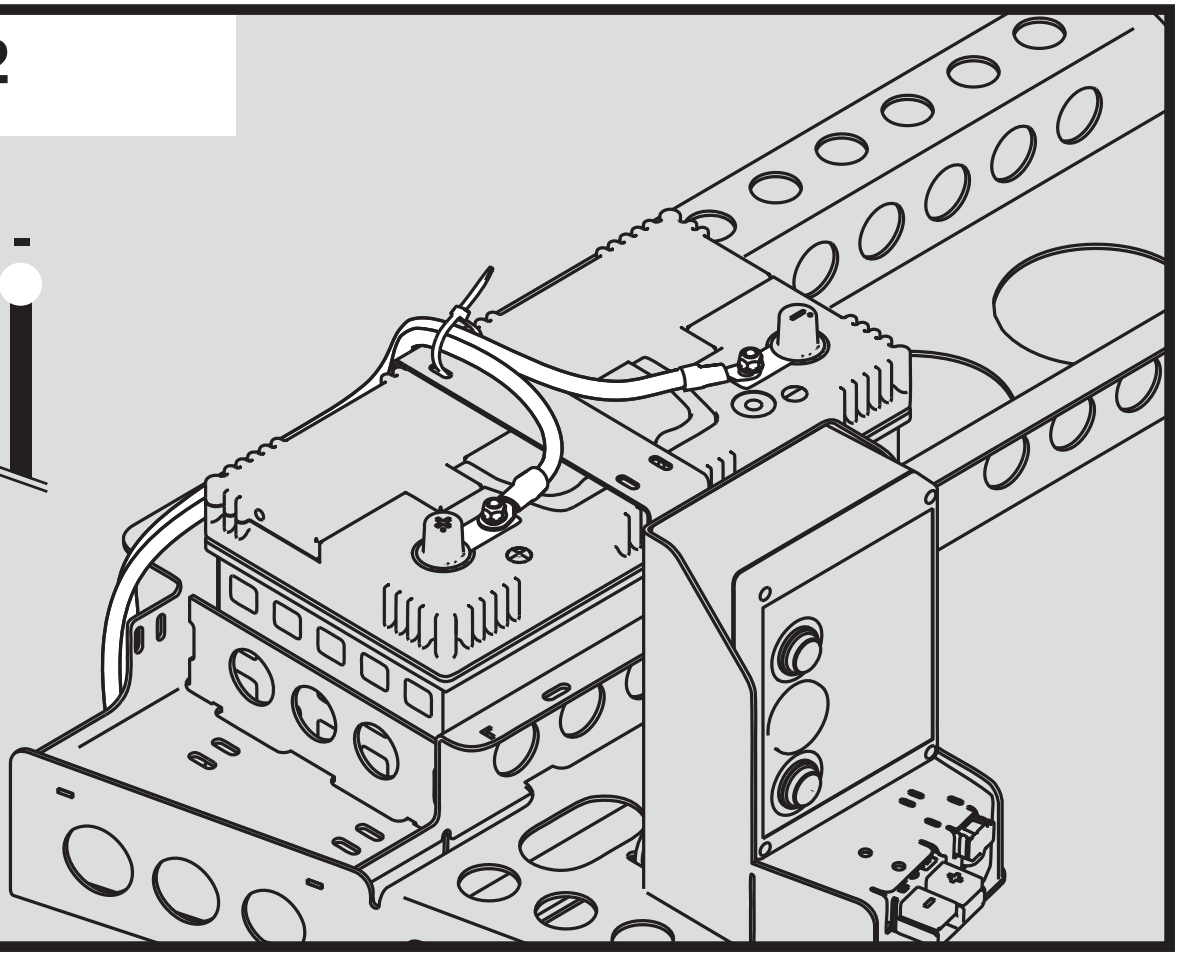


STEP 3

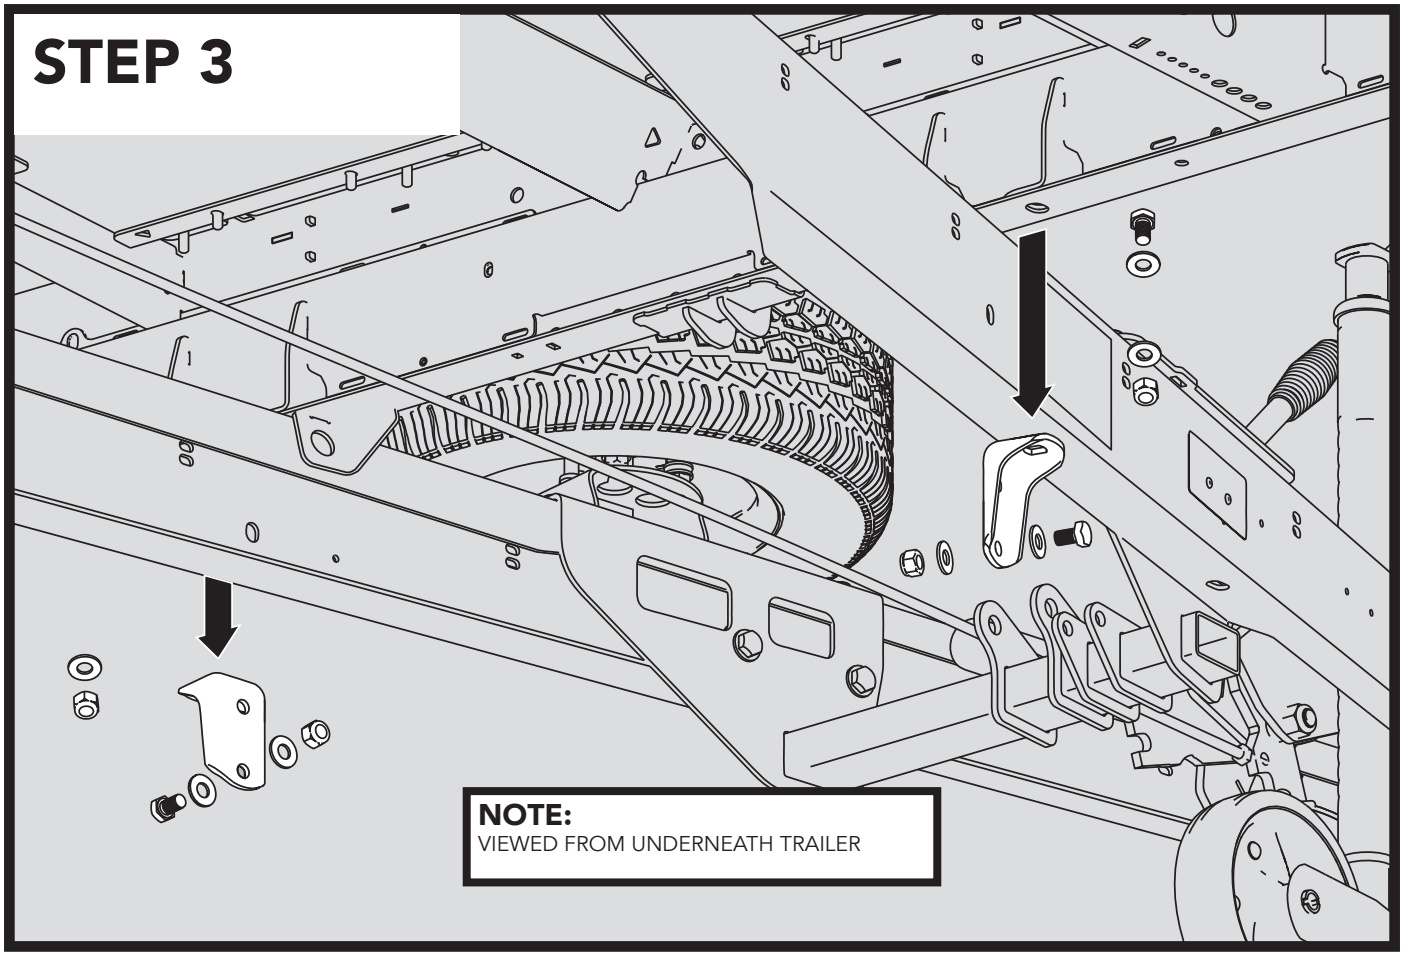


STEP 3

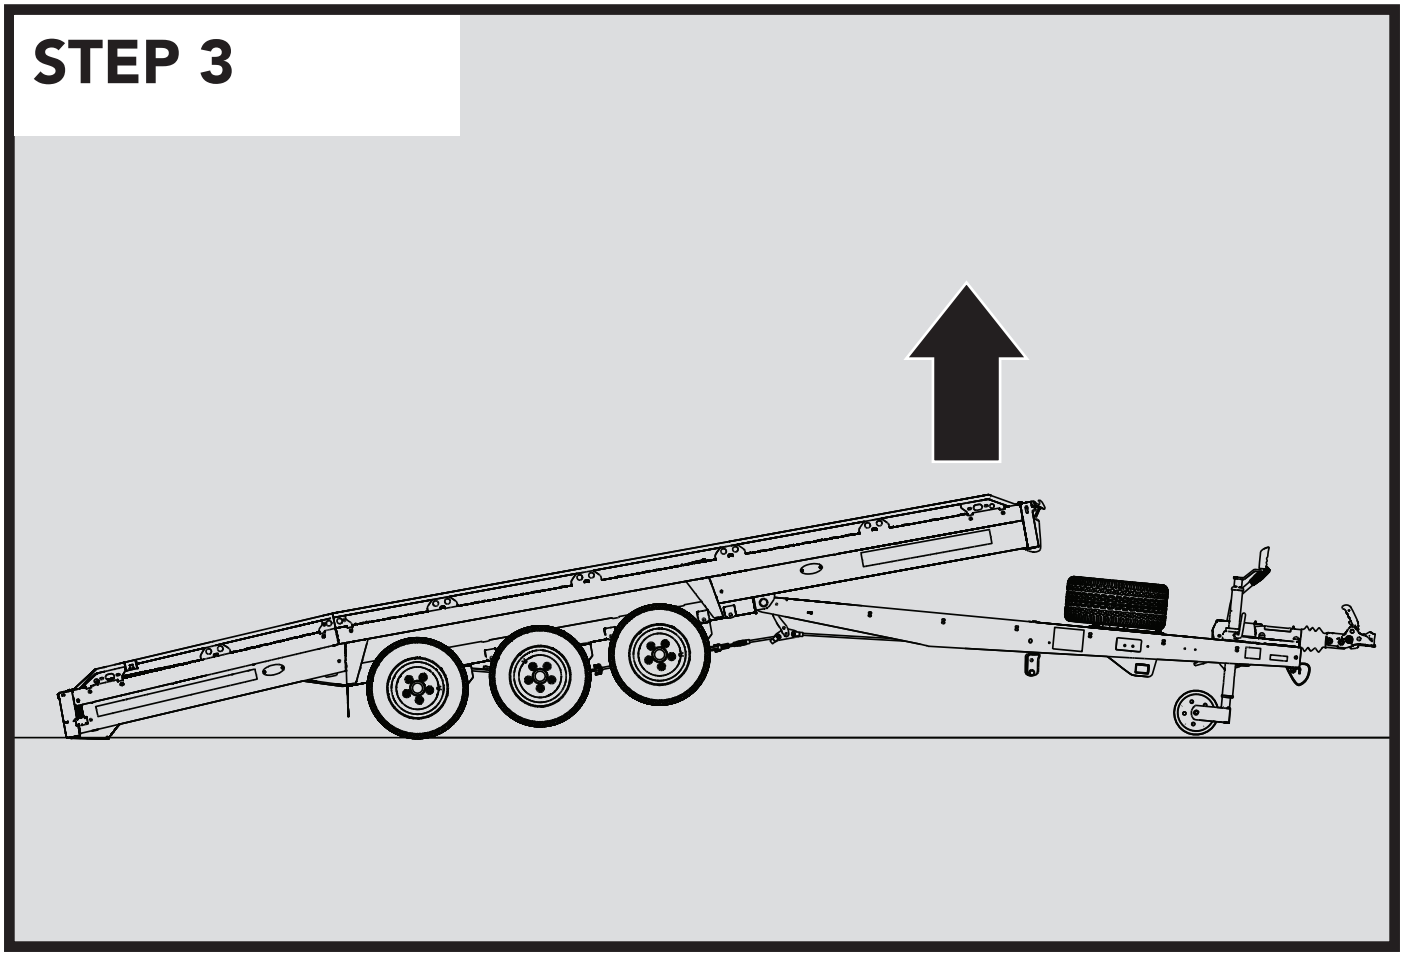

STEP 5

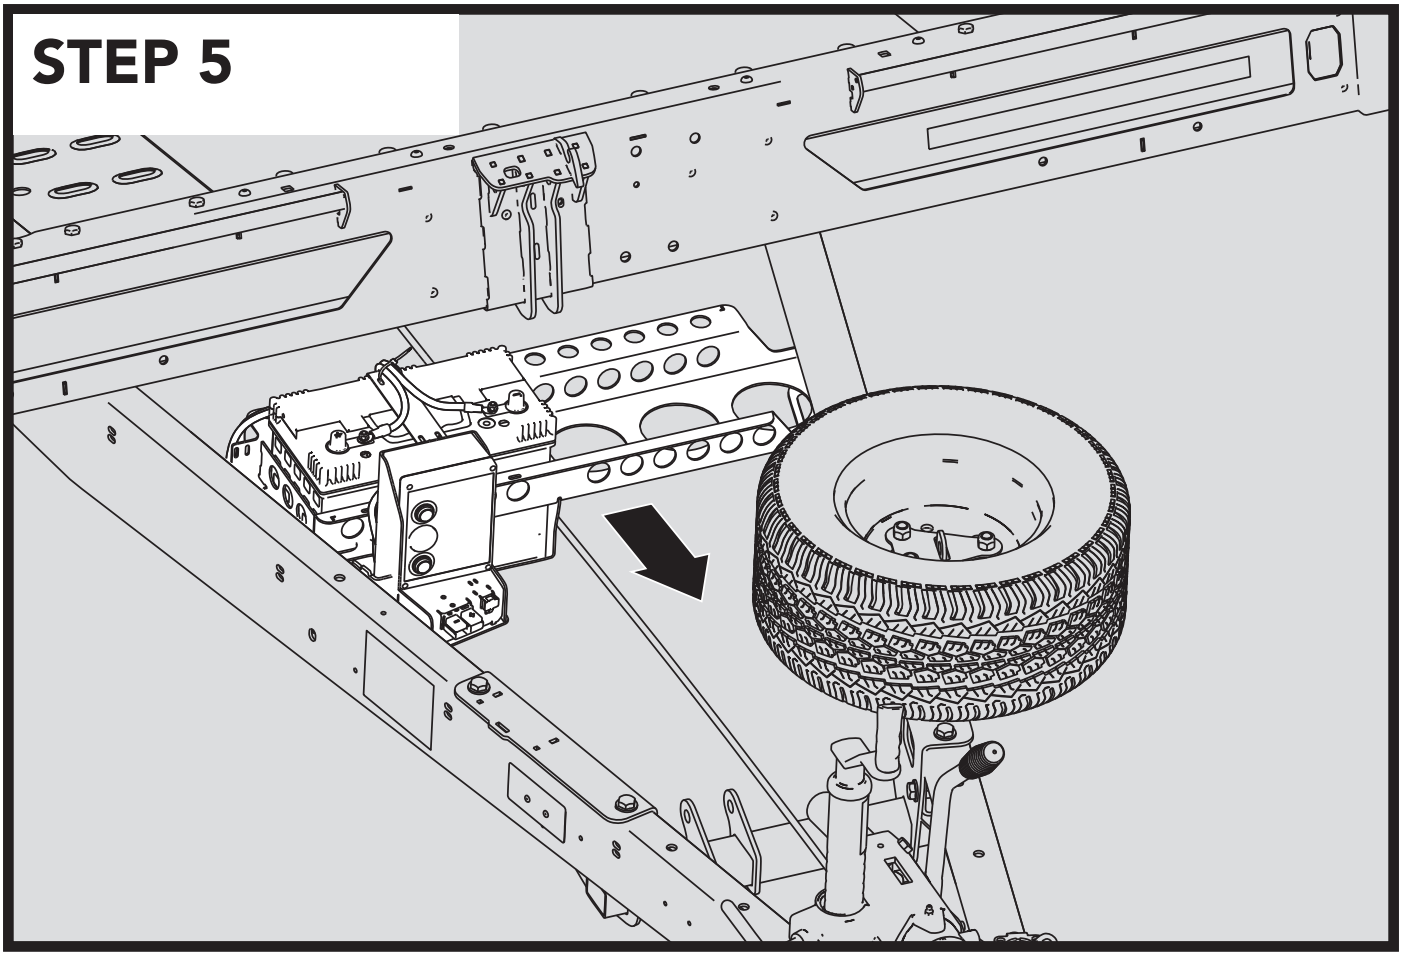


STEP 5

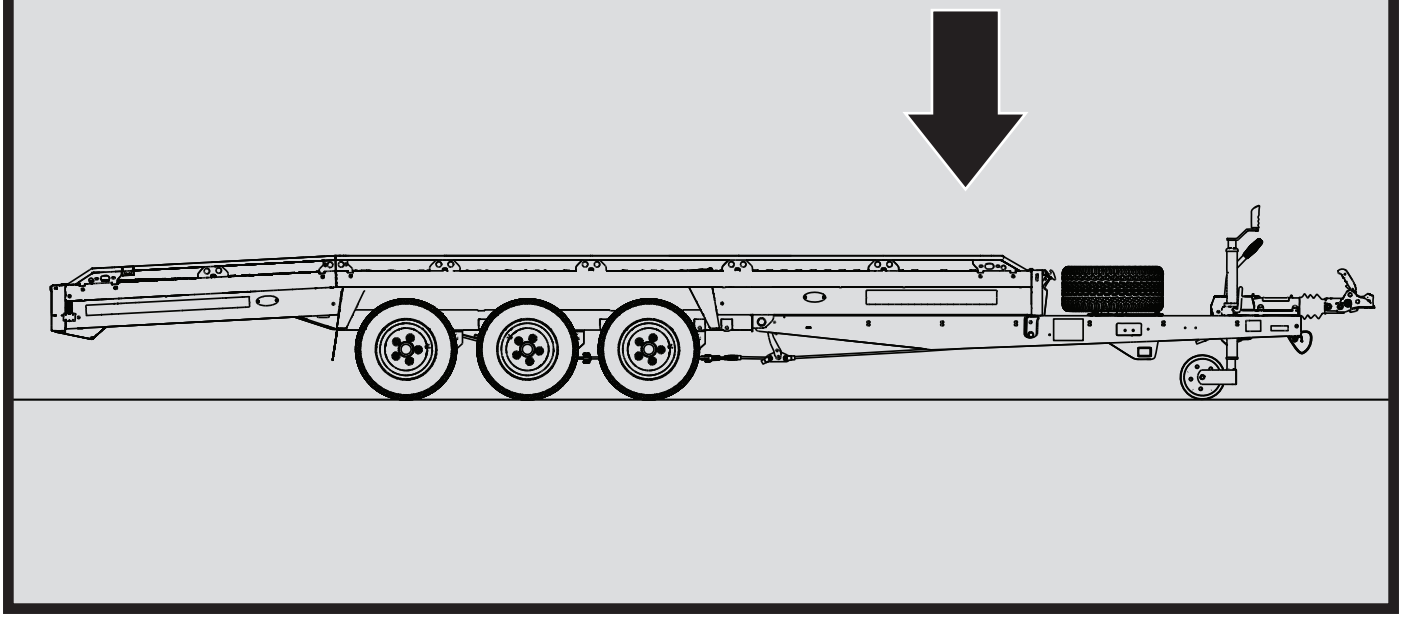


STEP 6a

2x - M10 x 25 BOLT
2x - M10 NYLOC NUT
4x - M10 WASHER

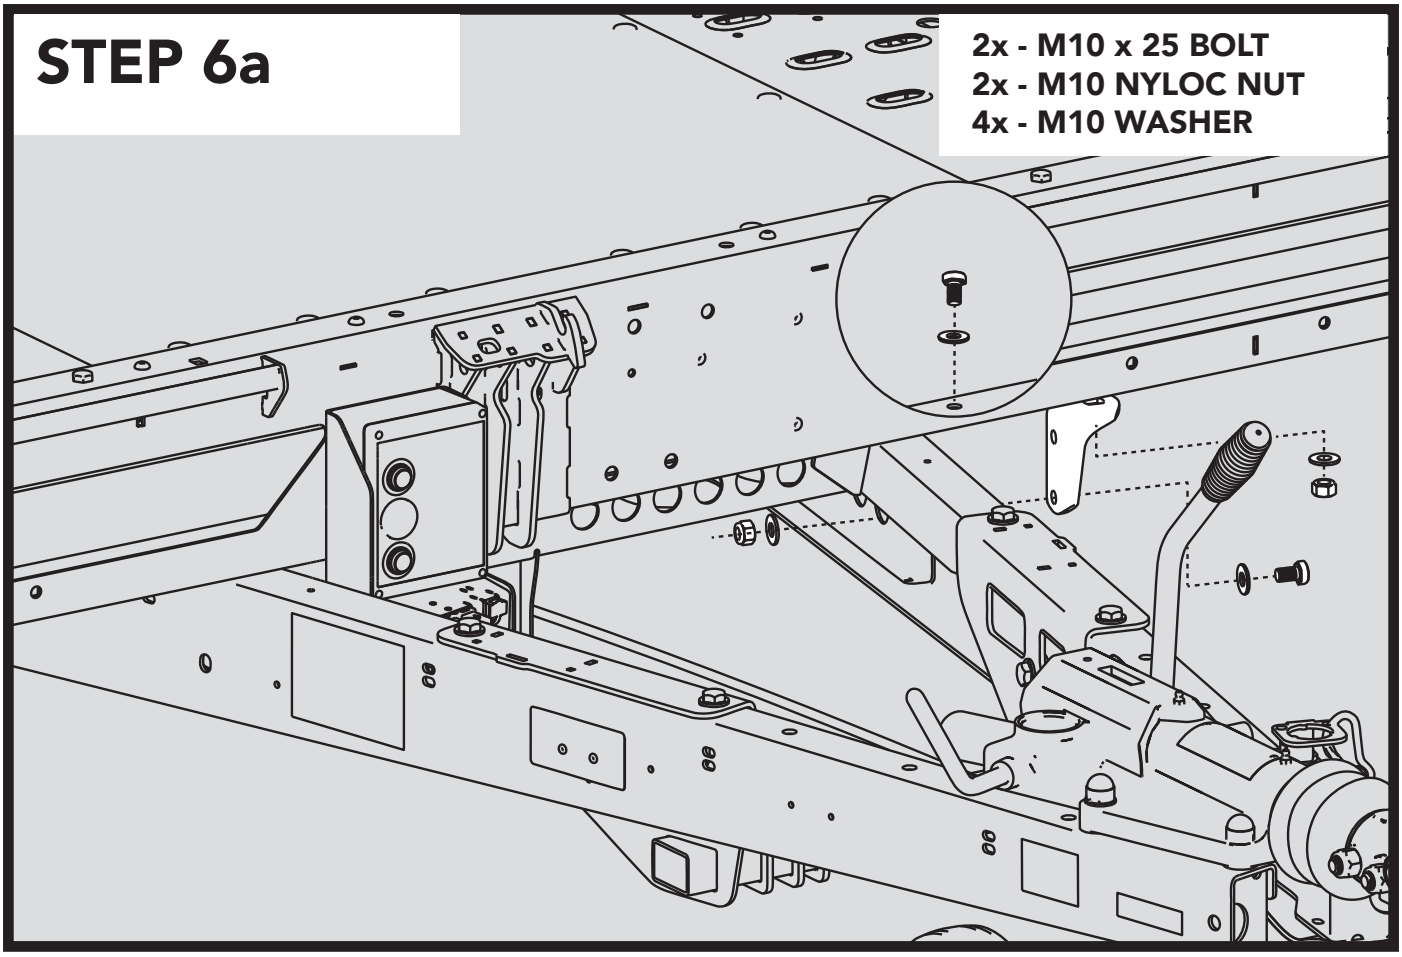

STEP 6b

2x - M10 x 25 BOLT
2x - M10 NYLOC NUT
4x - M10 WASHER

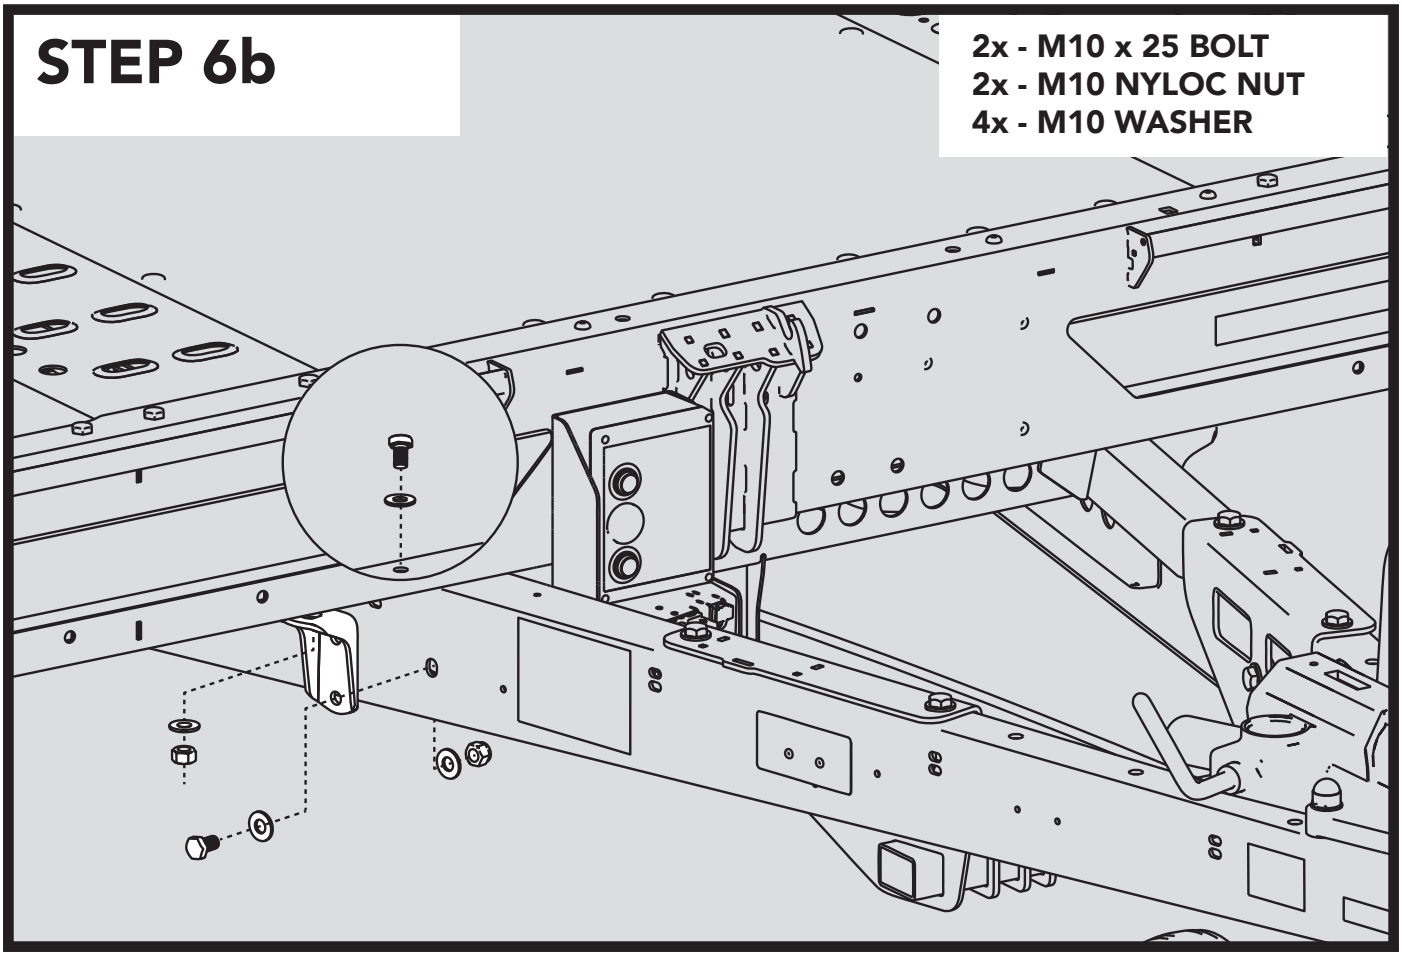

STEP 7

