
TRANSPORTER

KIT FITTING INSTRUCTIONS

P-RAMP-9502-K-N

Ramp Kit - 1.80m Punched Ramps
(When used as cross loading ramps)

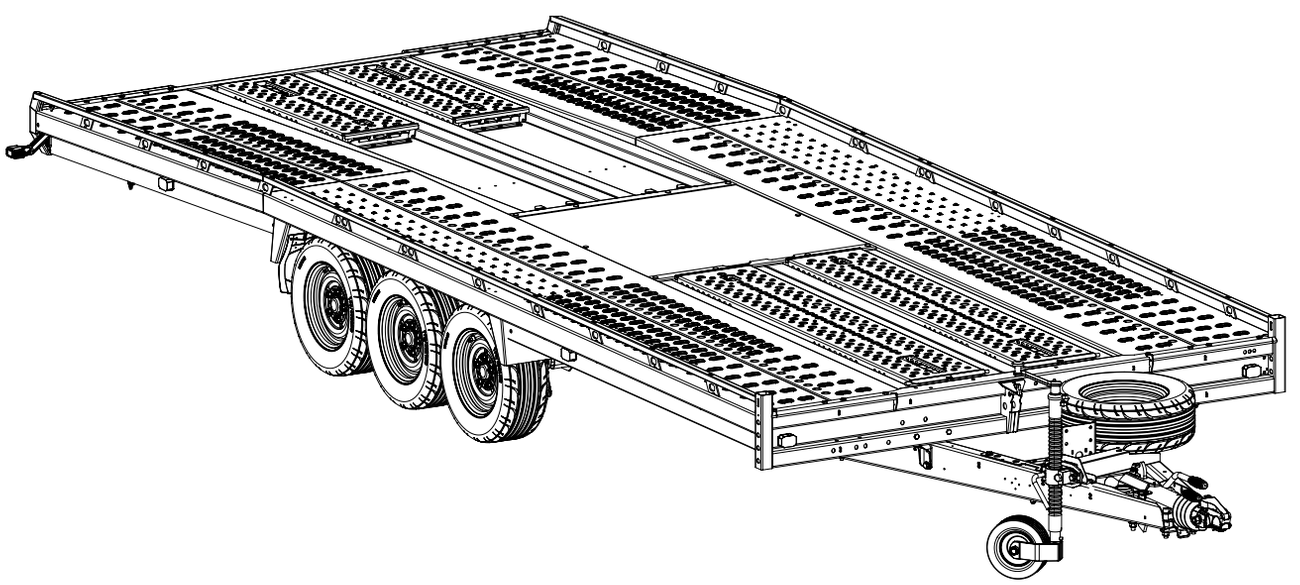


BRIAN JAMES TRAILERS ›› Connected to you

Edition TTRANSSWJO_2016_Q1_1

PARTS INCLUDED


P-RAMP-9502-K-N

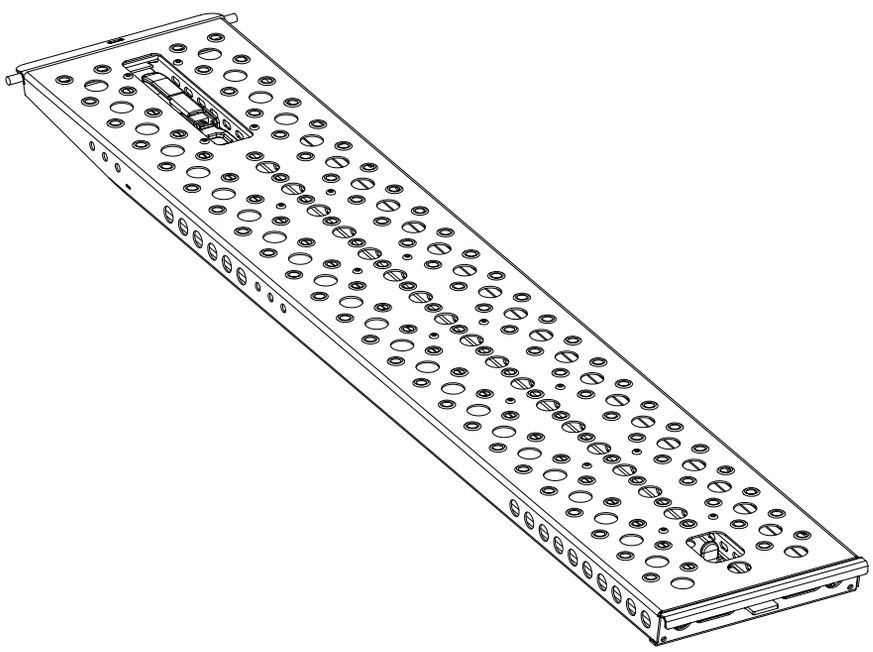

P-RAMP-9502-A-N


2x

STEP 1.1

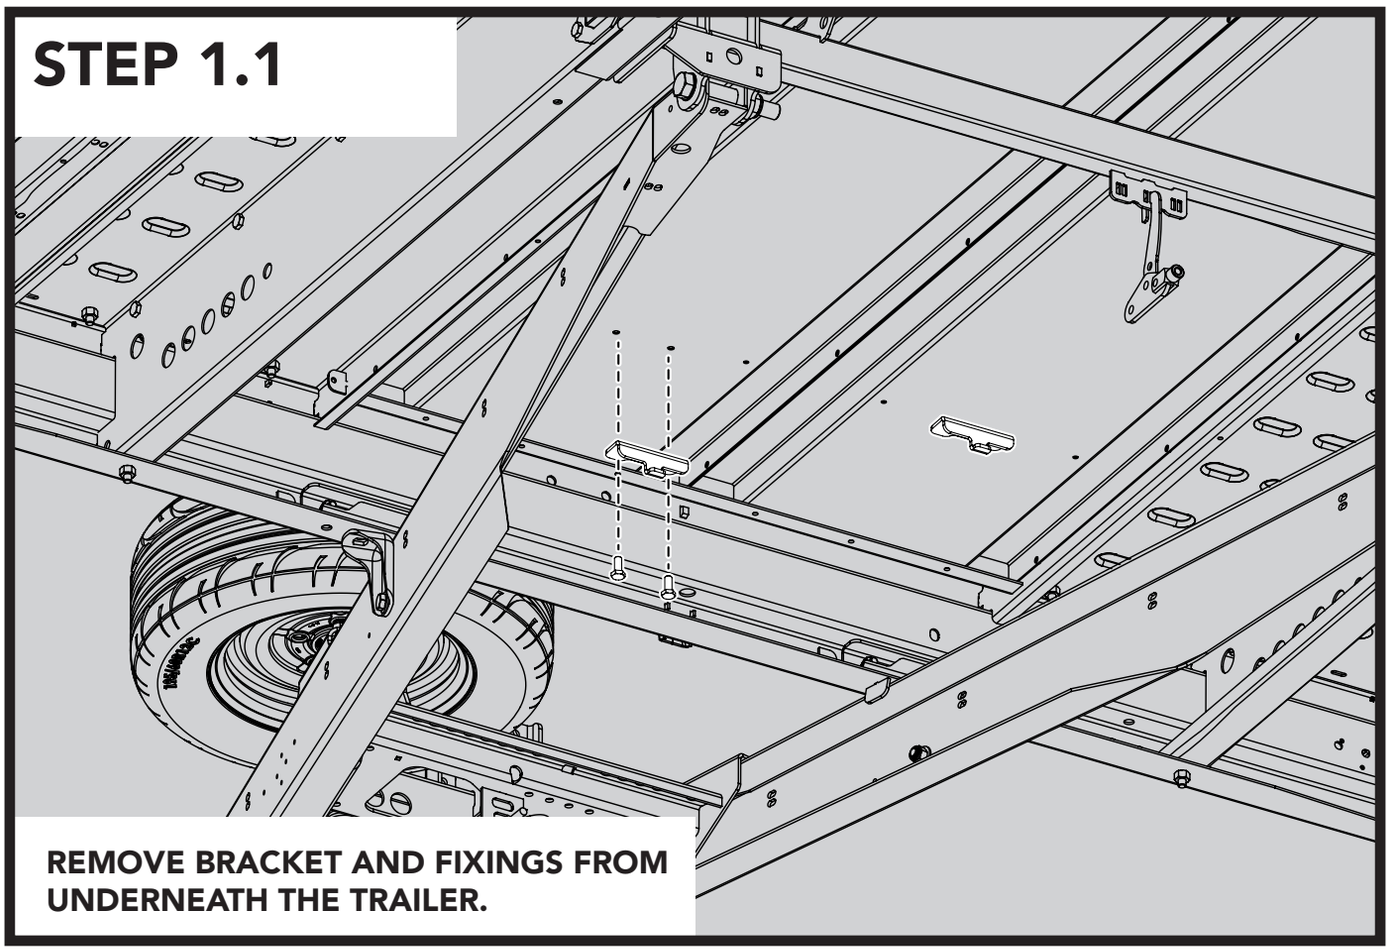


REMOVE BRACKET AND FIXINGS FROM UNDERNEATH THE TRAILER.

STEP 1.2

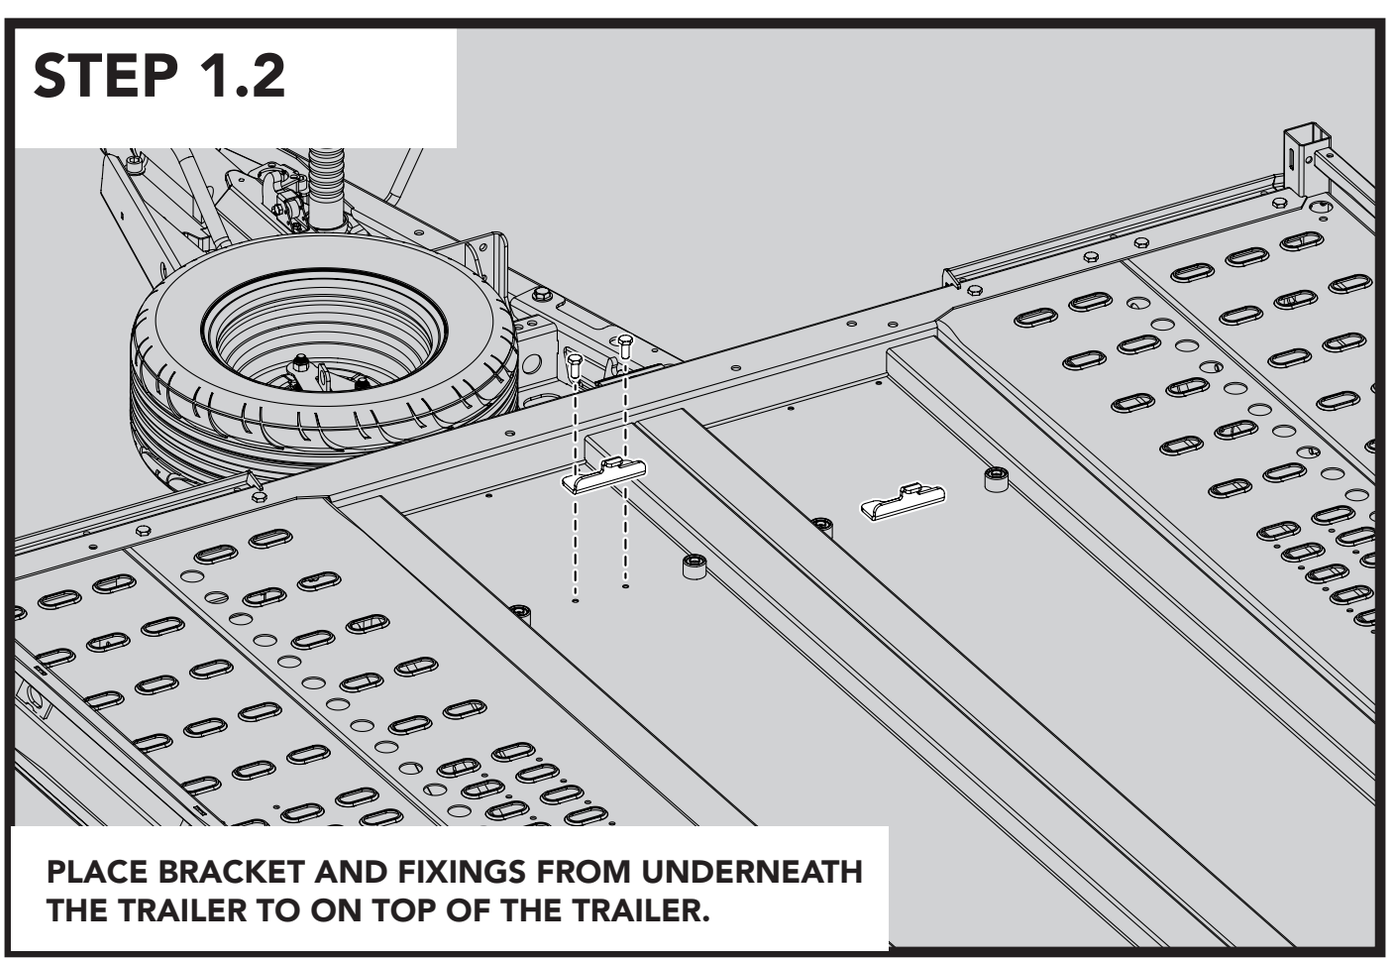

PLACE BRACKET AND FIXINGS FROM UNDERNEATH THE TRAILER TO ON TOP OF THE TRAILER.

STEP 2

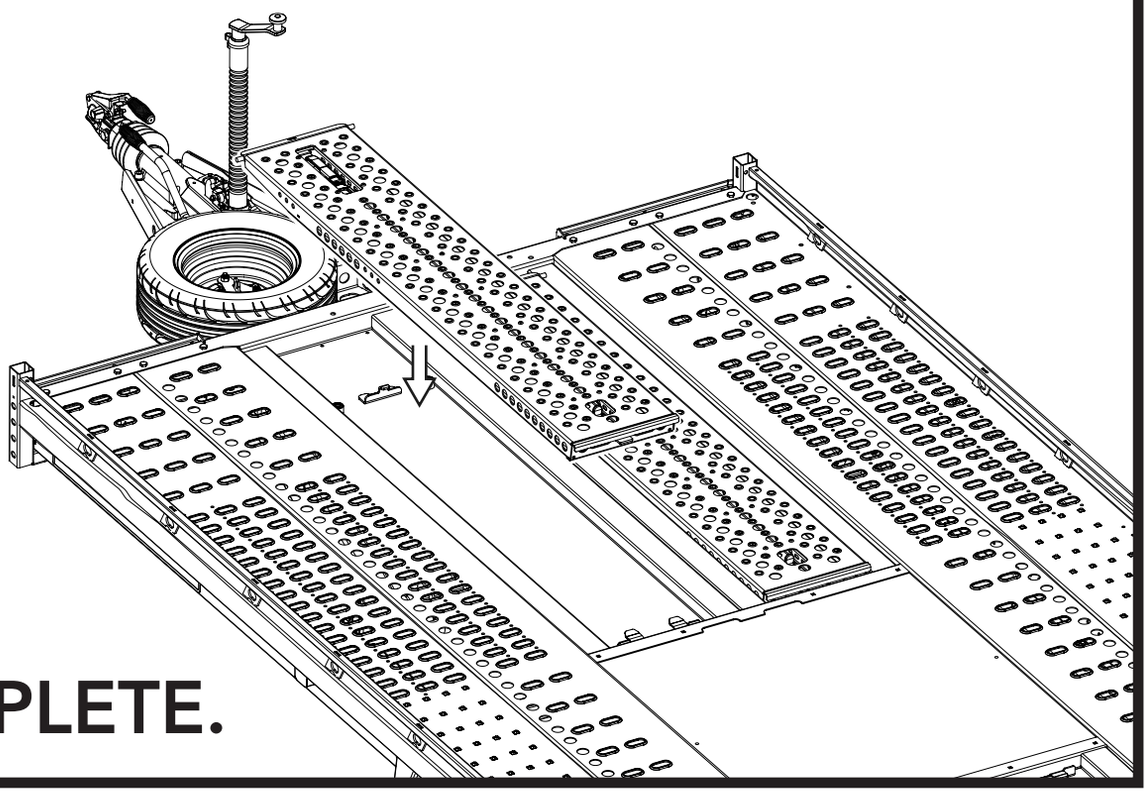

COMPLETE.