
RACE TRANSPORTER 7

KIT FITTING INSTRUCTIONS

P-RAMP-5003-K-N

Assistor Ramps

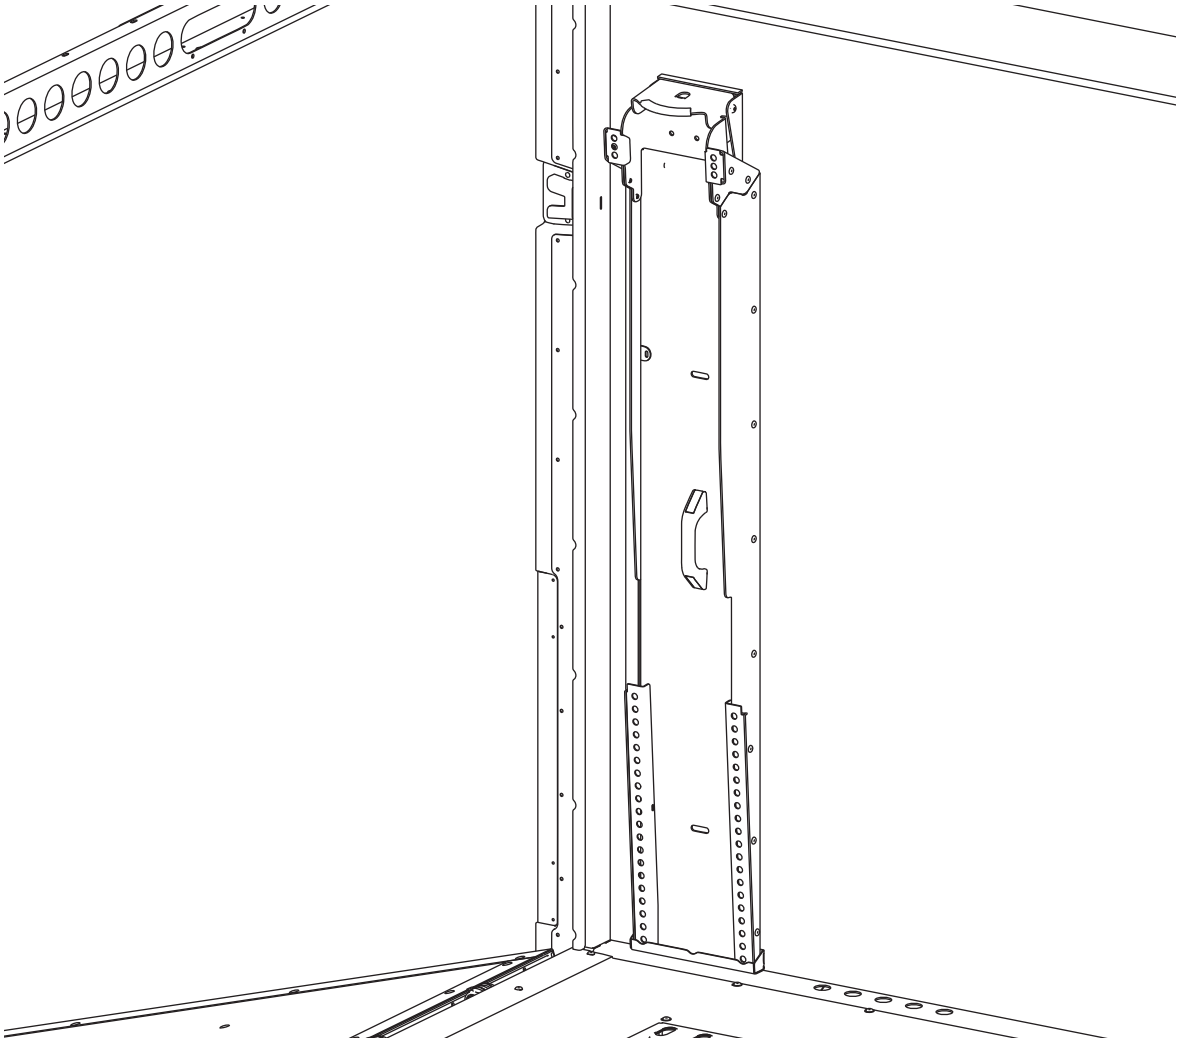

BJT BRIAN JAMES TRAILERS


Edition RT7ASRAMP_24Q1_1

PARTS INCLUDED


P-RAMP-5003-K-N




1x P-FTXK-8009-K-N

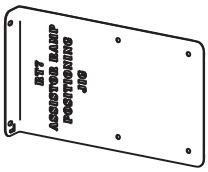


1x P-RT23-8045-B-N

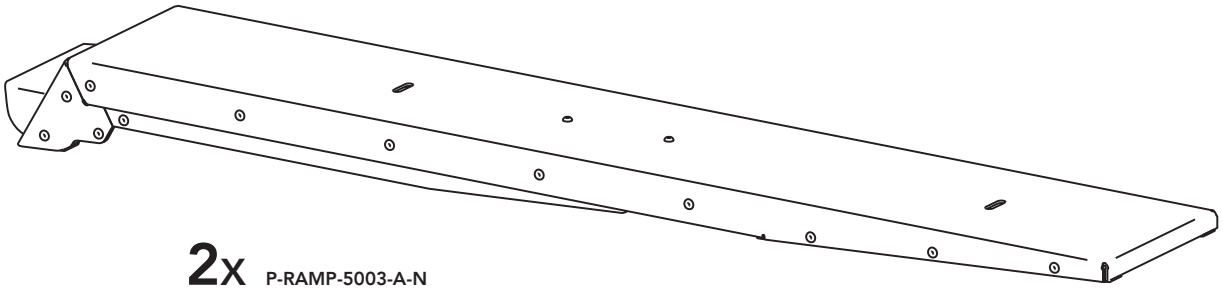

2x P-RAMP-5003-A-N

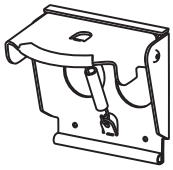


2x P-RT23-8030-A-N




2x P-RT23-8040-A-N

STEP 1

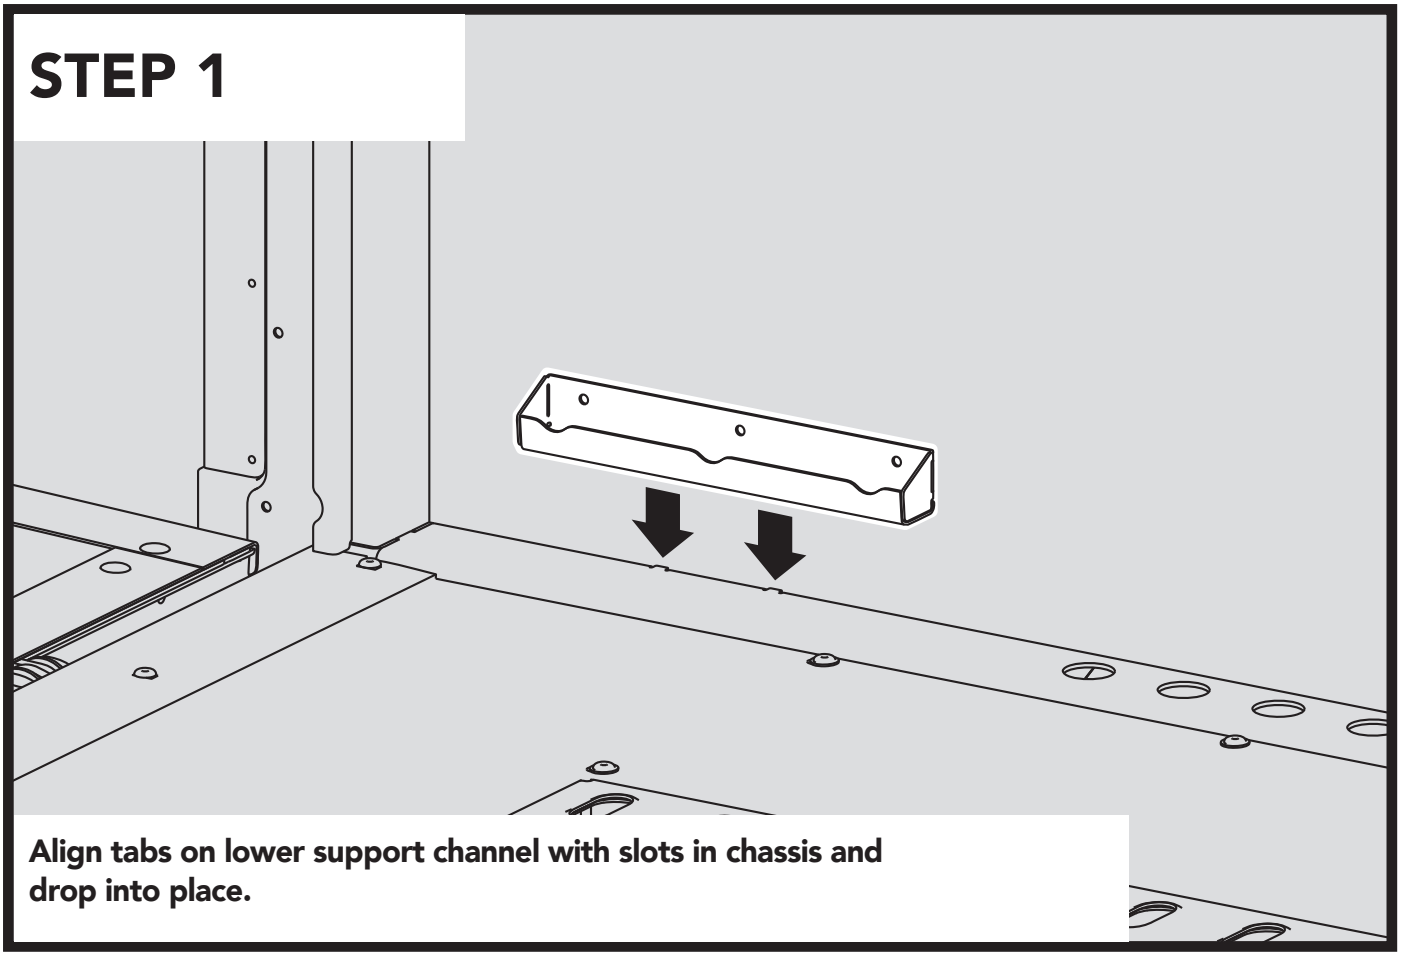


Align tabs on lower support channel with slots in chassis and drop into place.

STEP 2

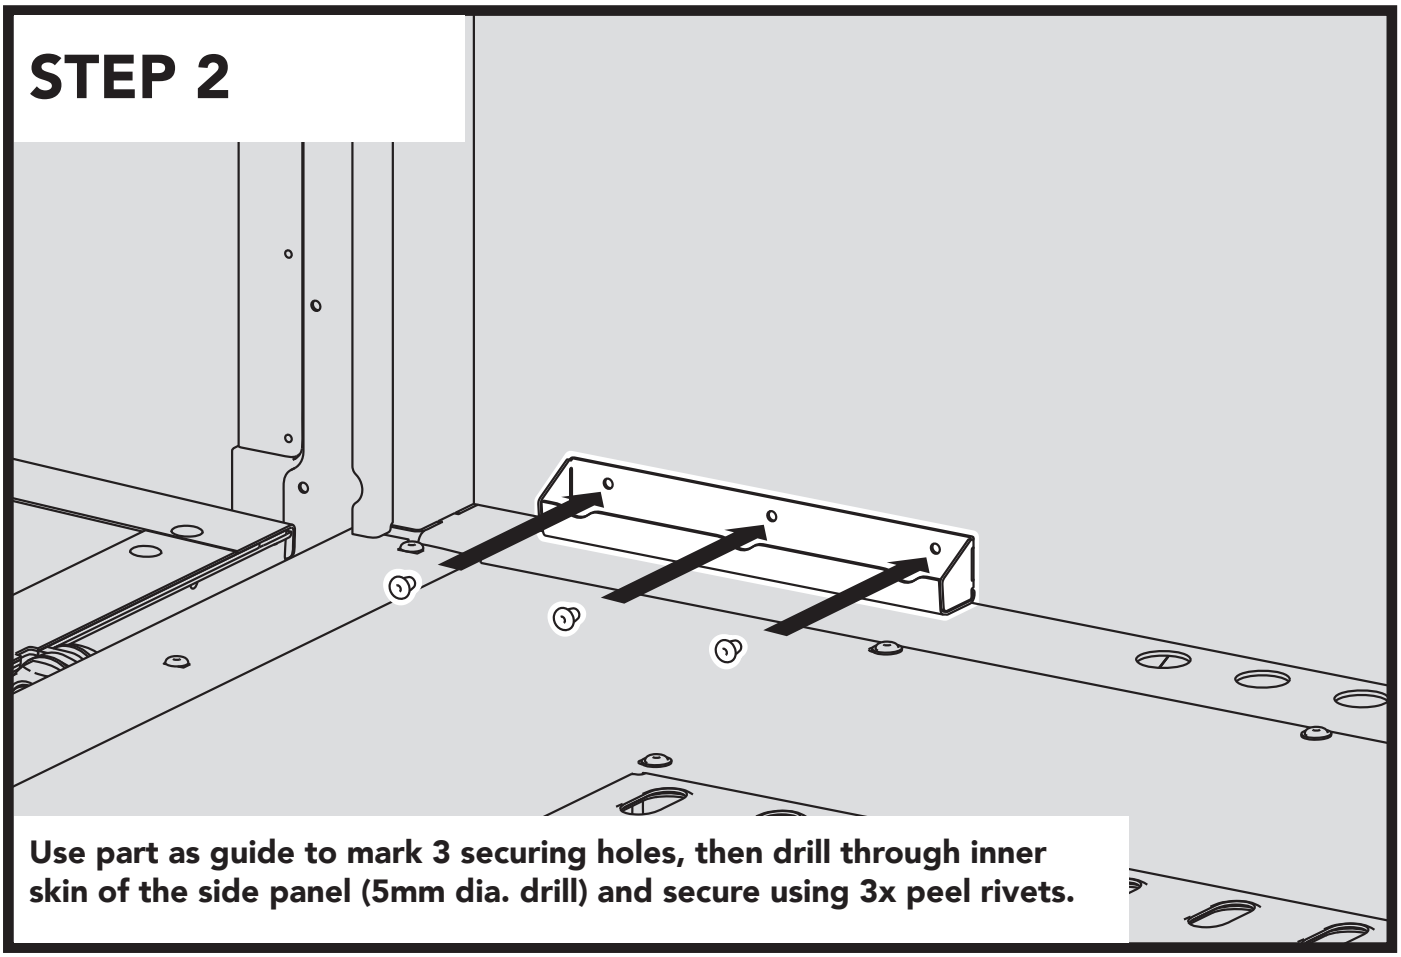


Use part as guide to mark 3 securing holes, then drill through inner skin of the side panel (5mm dia. drill) and secure using 3x peel rivets.

STEP 3

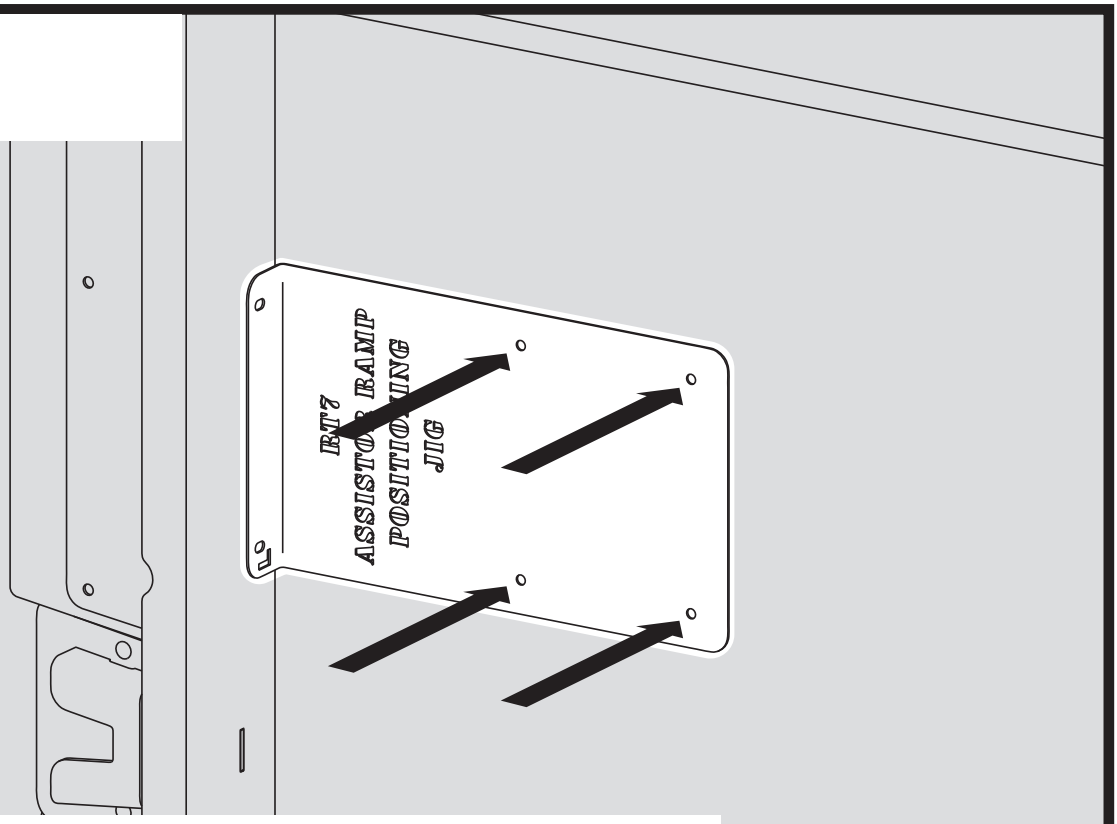


Align jig with holes on rear post and mark 4 securing holes, then drill through inner skin of the side panel (5mm dia. drill)

STEP 4

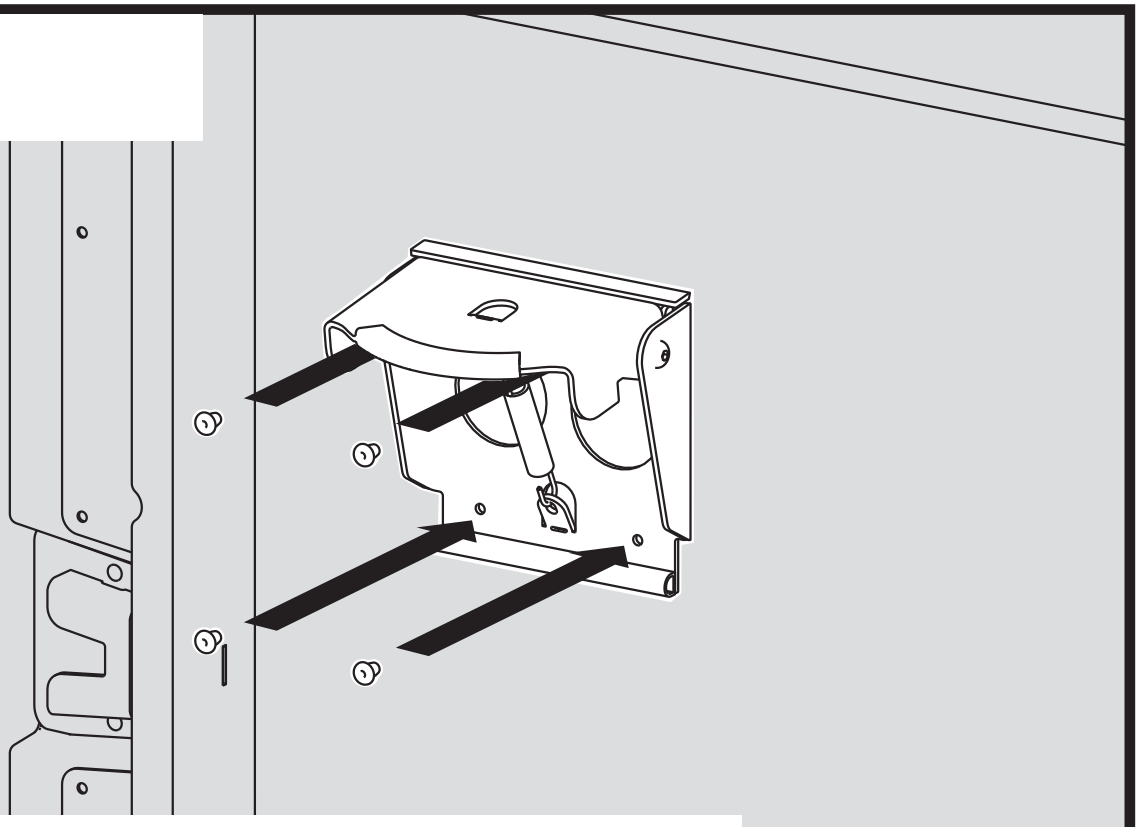


Attach upper clamp bracket using 4x peel rivets

STEP 5

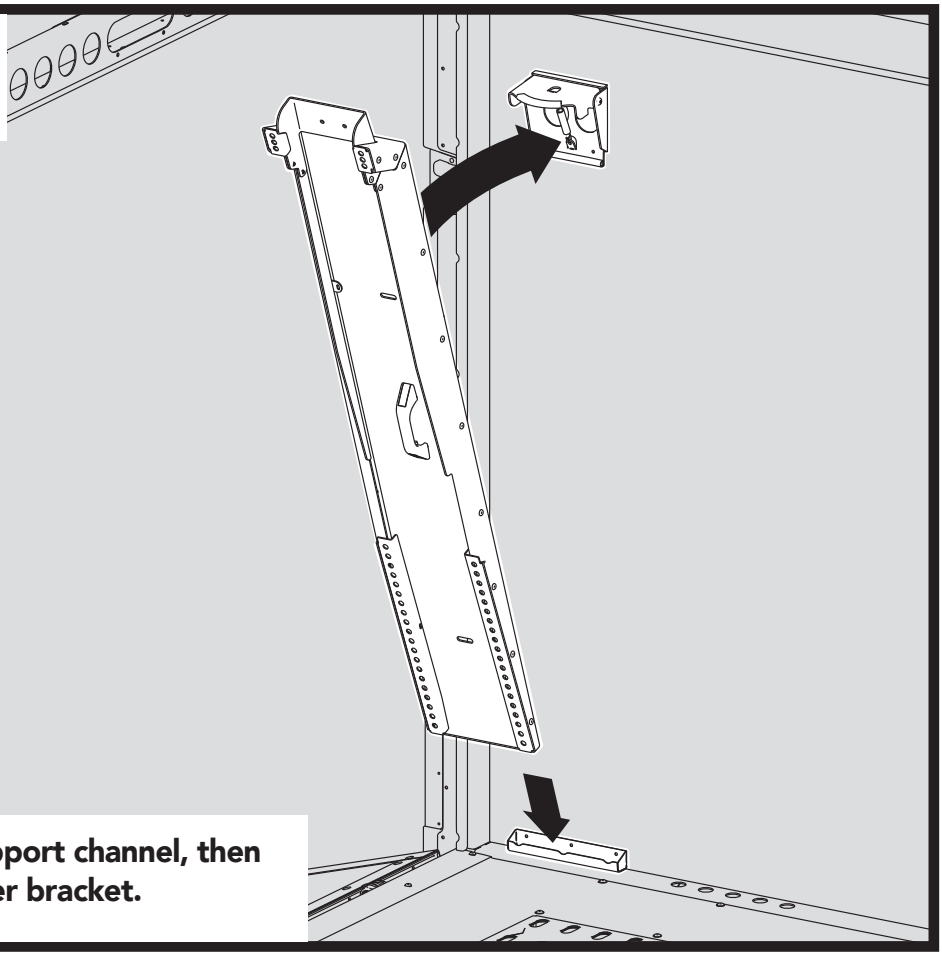

Slot tip of ramp into lower support channel, then engage top of ramp with upper bracket.

STEP 6

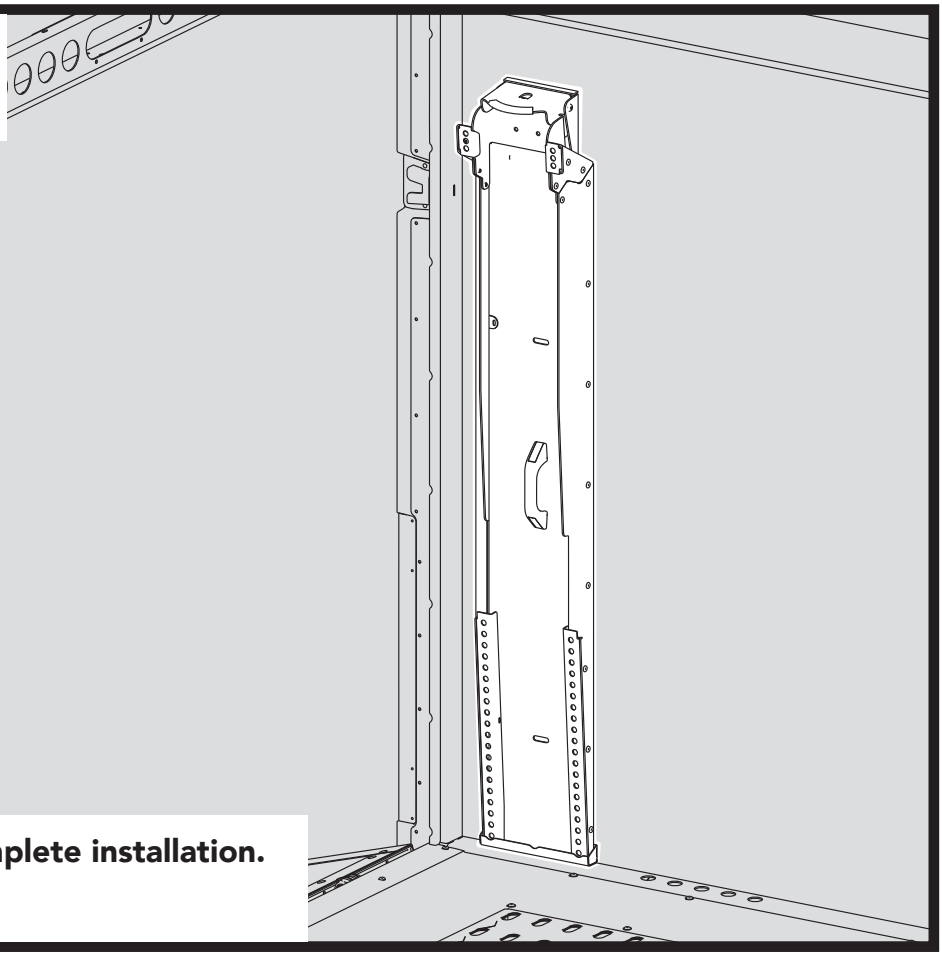

Repeat on other side to complete installation.