


RACE TRANSPORTER 7

KIT FITTING INSTRUCTIONS

P-RAMP-5200-K-N

Race Ramps - Standard height trailer

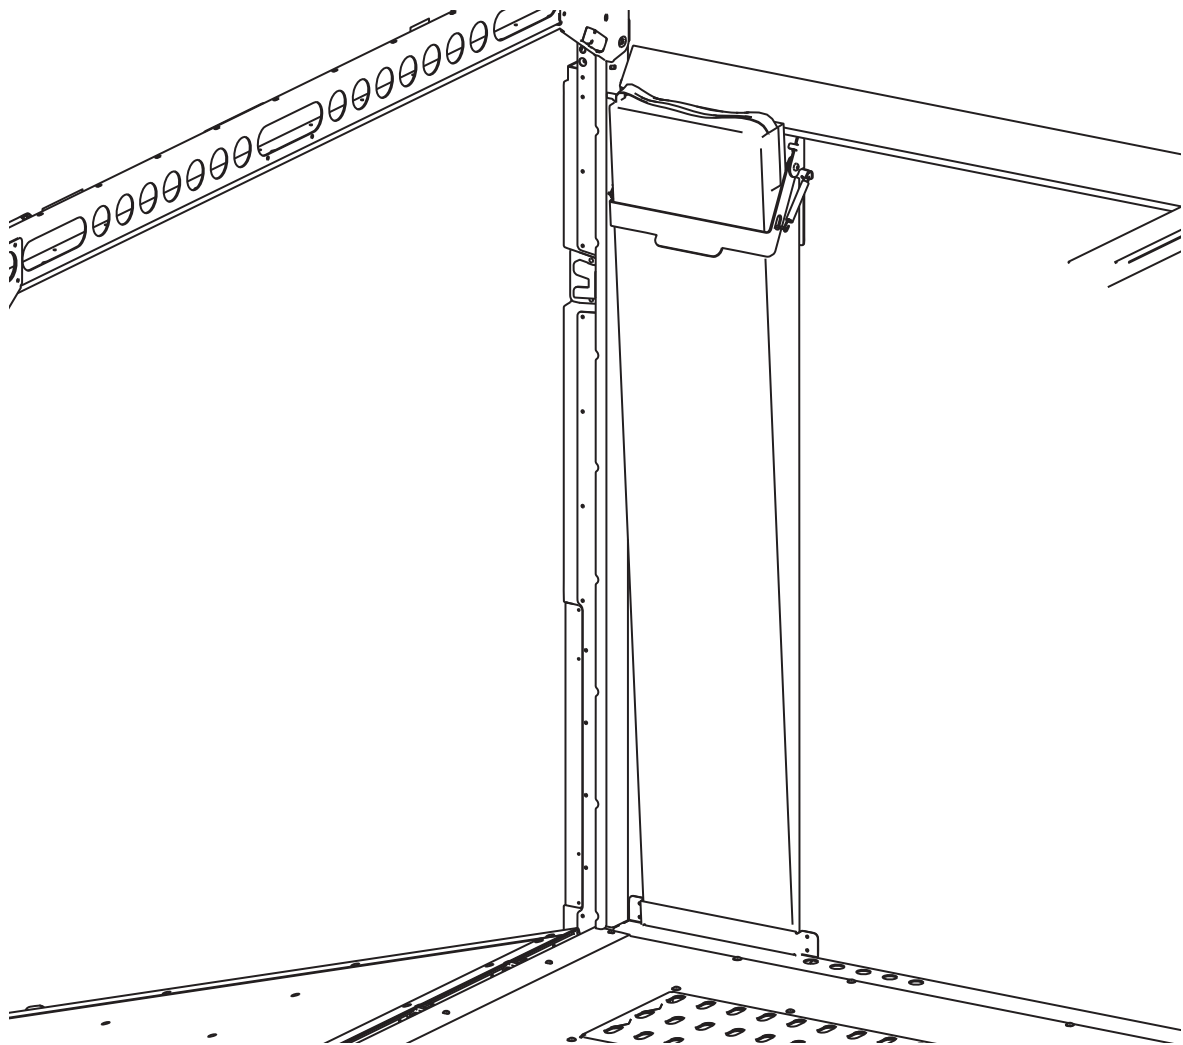


PARTS INCLUDED


P-RAMP-5200-K-N




1x P-FTXK-8000-K-N




2x P-RT23-8025-A-N

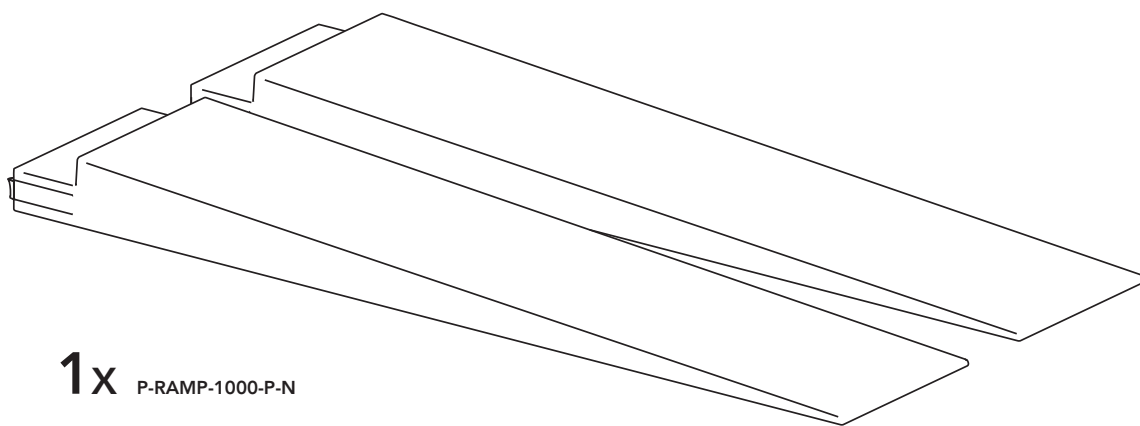

1x P-RAMP-1000-P-N

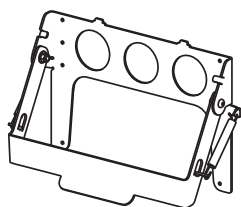


1x P-RT23-8000-A-L

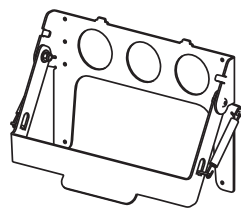


1x P-RT23-8000-A-R

STEP 1

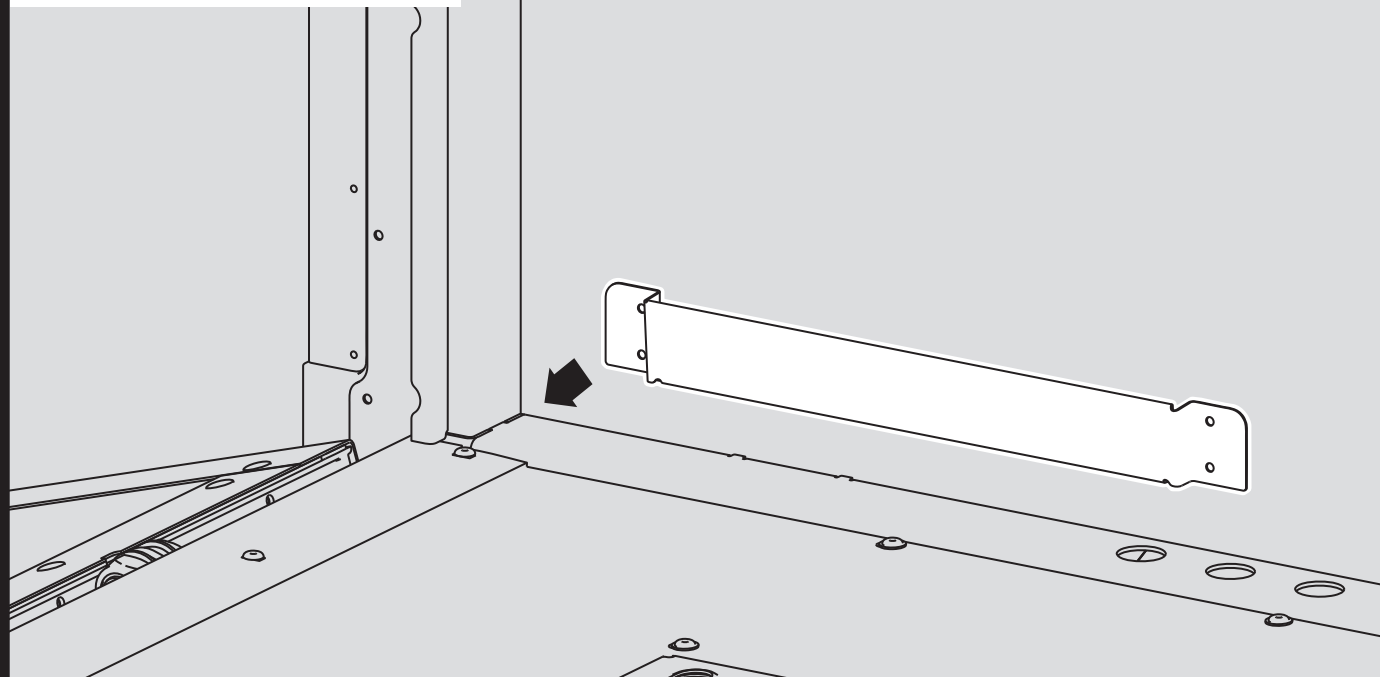


Align lower support channel in bottom corner of side panel.

STEP 2

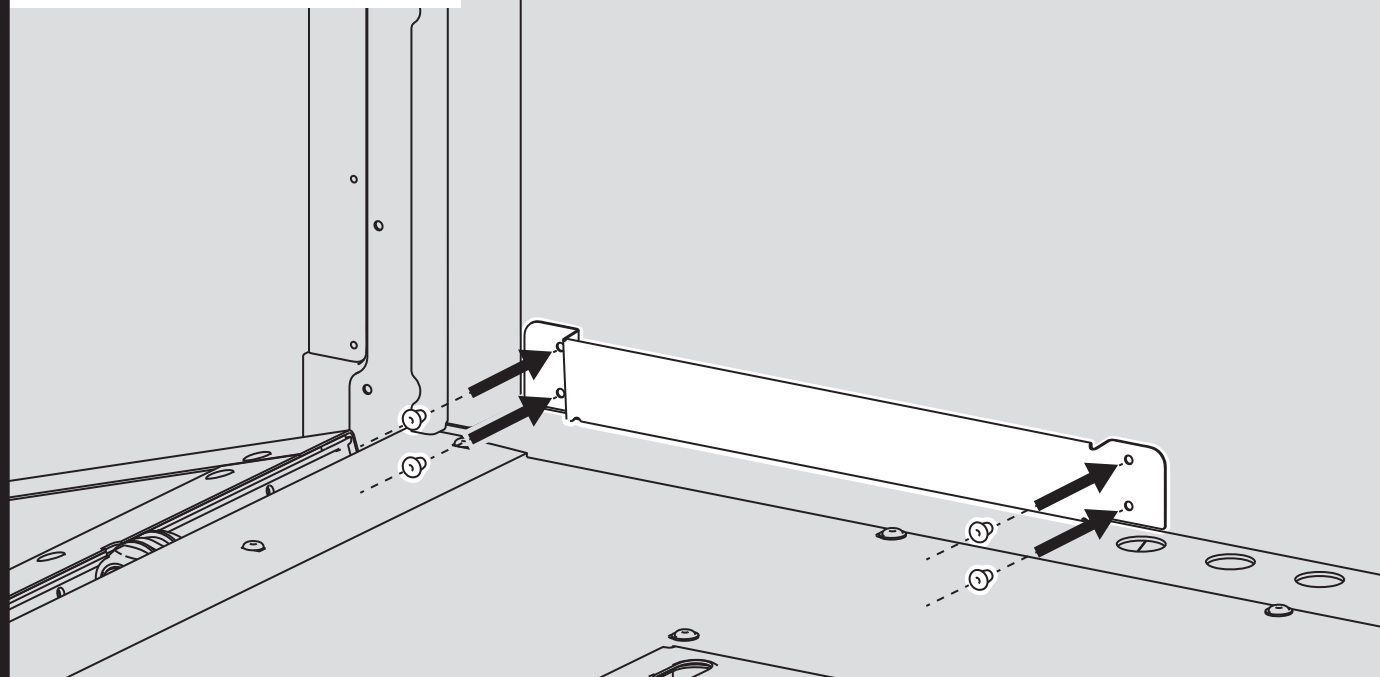


Use part as guide to mark 4 securing holes, then drill through inner skin of the side panel (5mm dia. drill) and secure using 4x peel rivets.

STEP 3

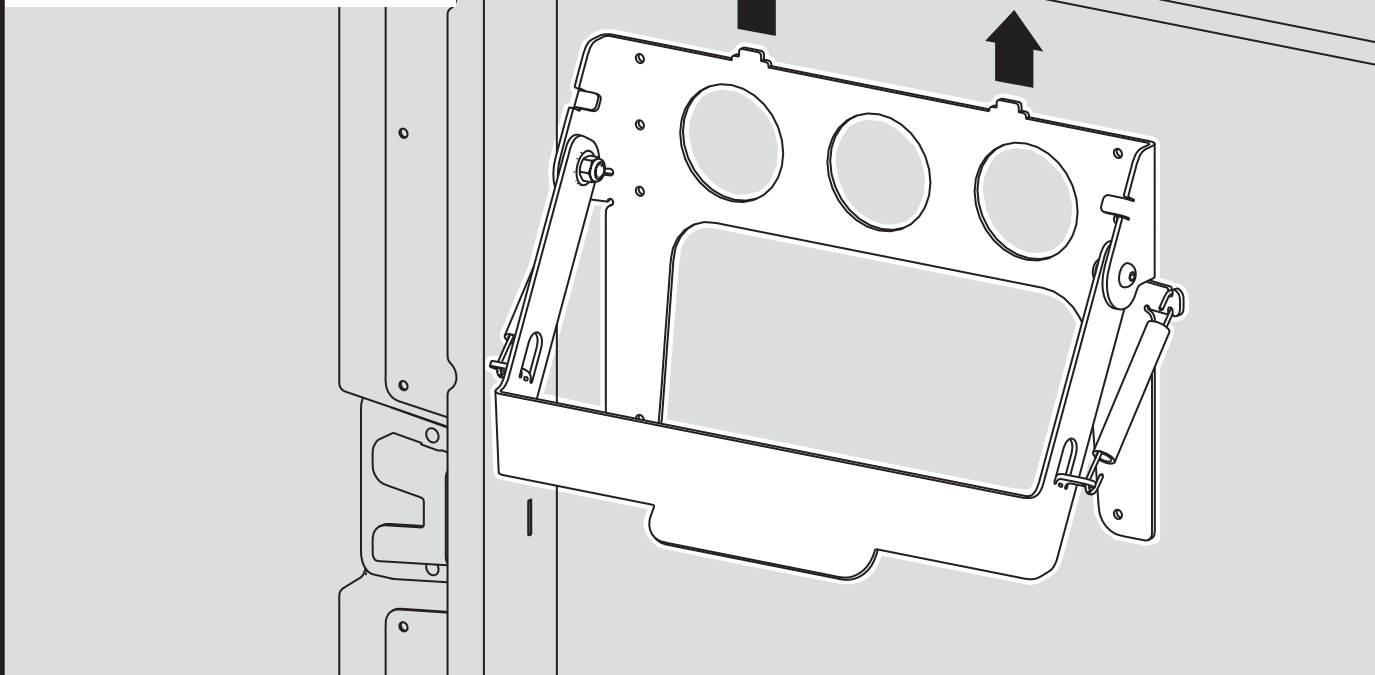


Align upper clamp with holes on underside of lighting strip. Mark 8 securing holes, then drill through inner skin of the side panel (5mm dia. drill).

STEP 4

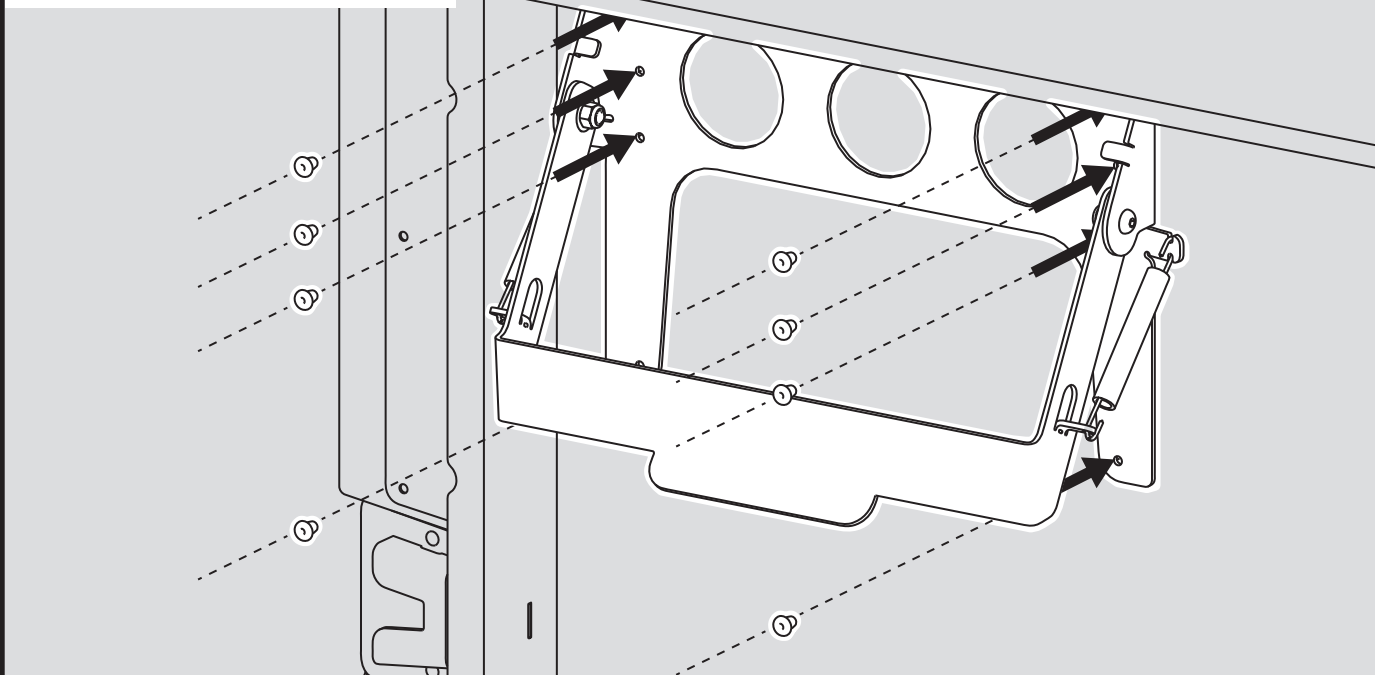


Attach upper clamp bracket using 8x peel rivets.

STEP 5

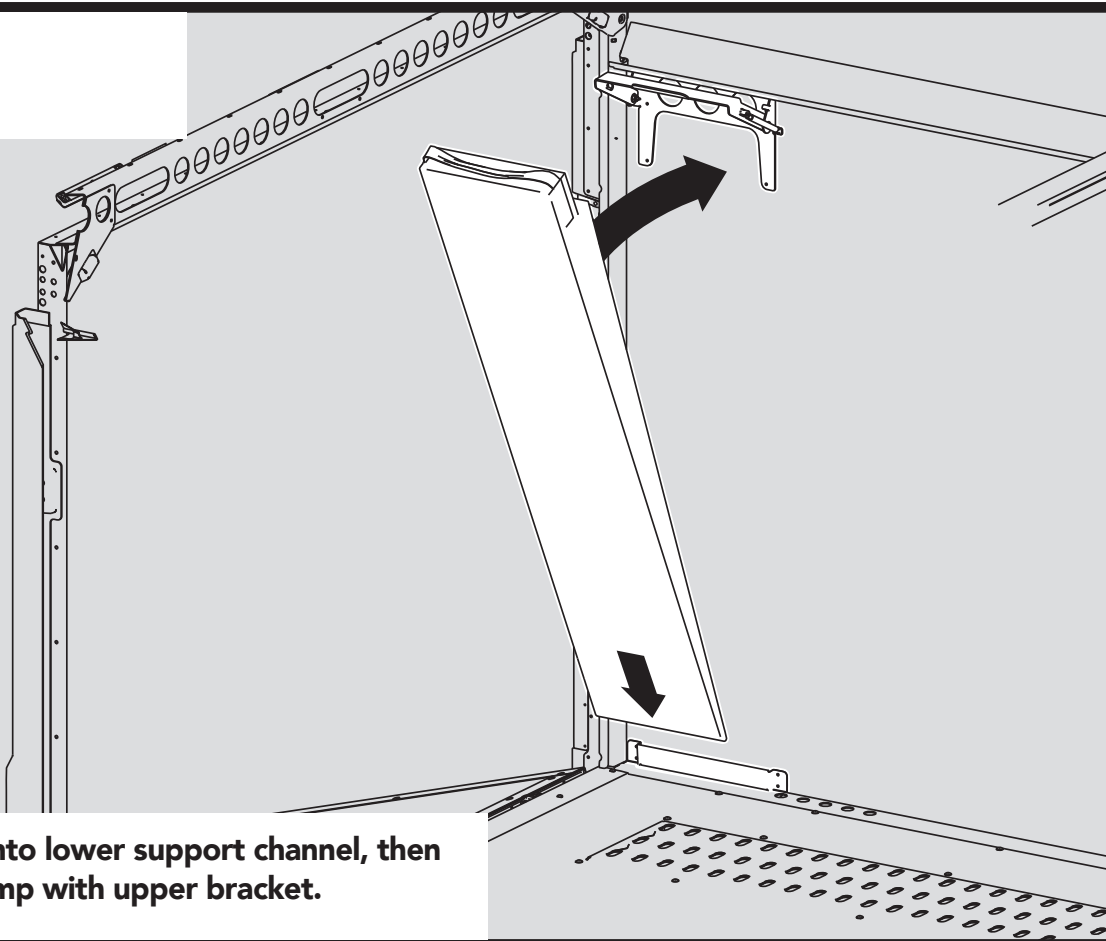

Slot tip of ramp into lower support channel, then engage top of ramp with upper bracket.

STEP 6

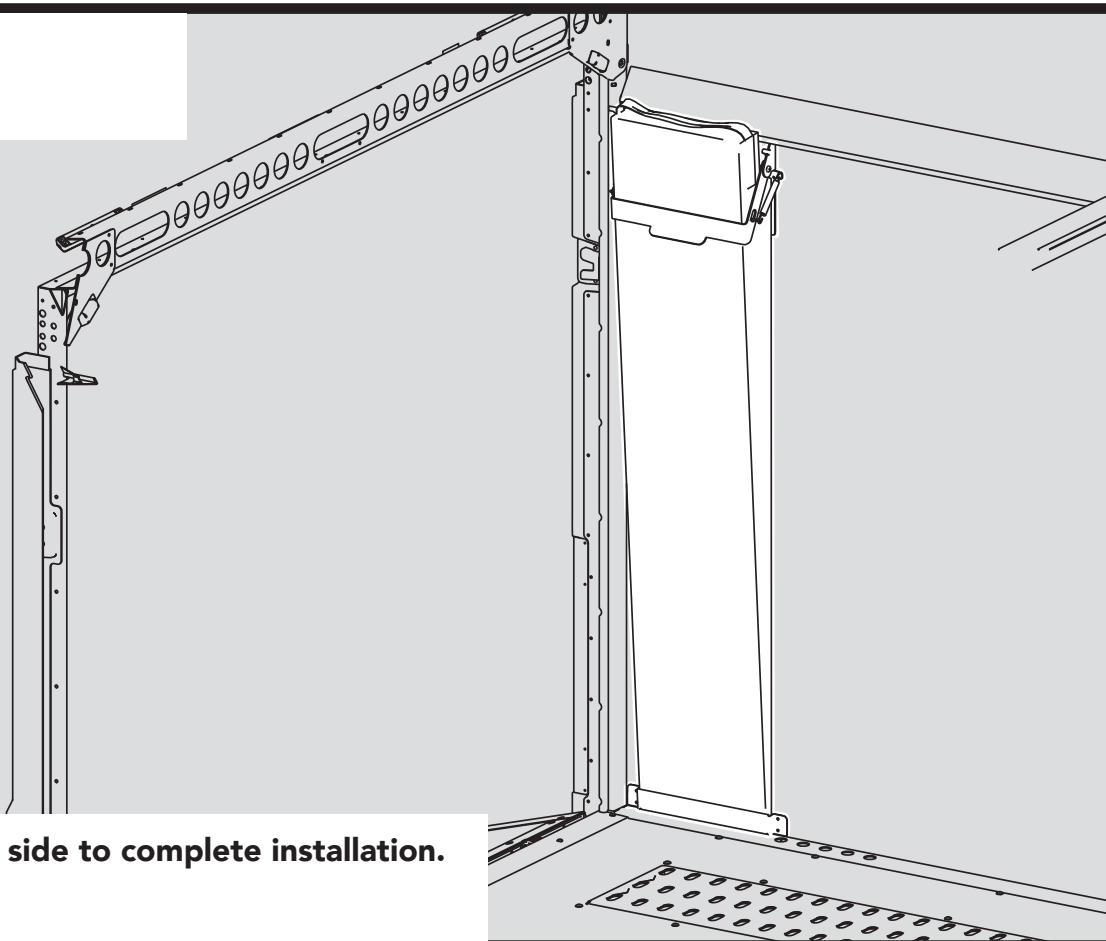

Repeat on other side to complete installation.